




KAKO NASTAVITI URO S POMOČJO PROGRAMA CONFIG TOOL




1. Nastavitev datuma in ure

1.1. Na računalniku odprite program »**ConfigTool**«.

1.2. Kliknite na »**Search Setting**«. V polje »**Password**«, vpišite geslo enote, kateri želite spremeniti uro in datum.

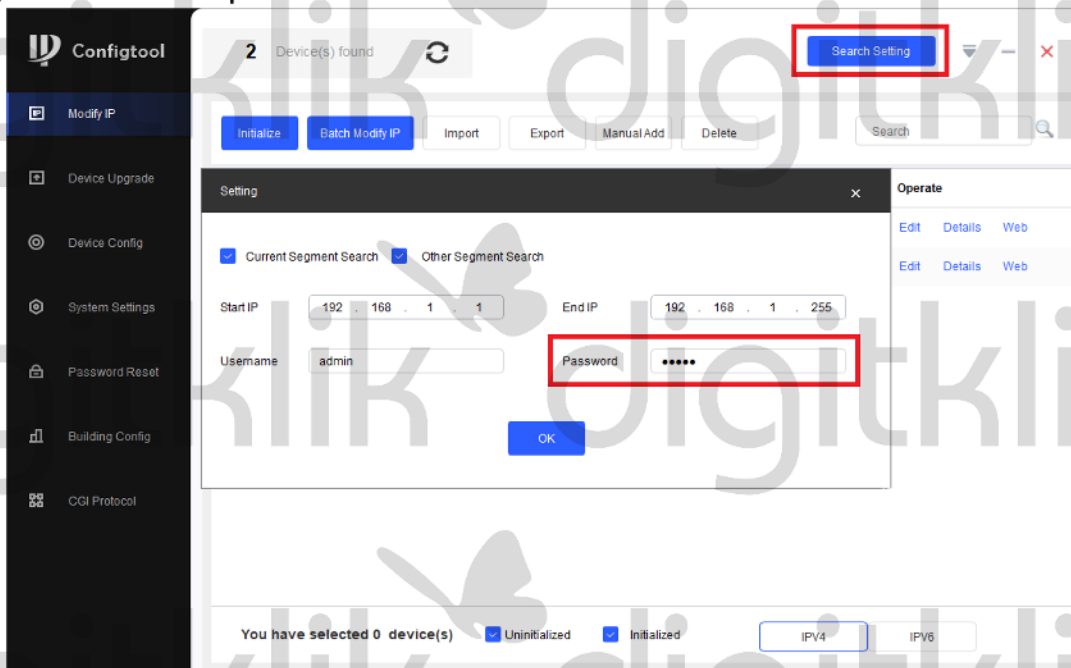

1.3. Pod »**System Settings**«, izberite enoto in nastavite nastavitve, kot prikazujeta spodnji sliki. Nastavitve shranite s pritiskom na gumb »**Save**«, pri nastavitvi **DST** in **NTP**.

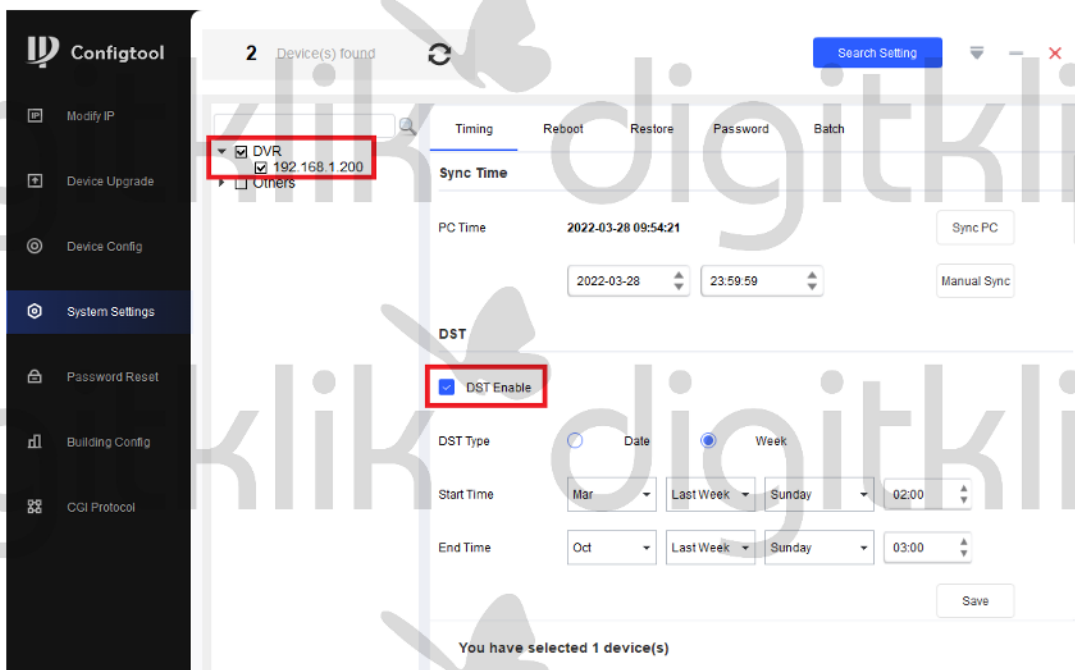

Configtool

- Modify IP
- Device Upgrade
- Device Config
- System Settings**
- Password Reset
- Building Config
- CGI Protocol

2 Device(s) found

Search Setting

Timing Reboot Restore Password Batch

DVR
 192.168.1.200
 Others

NTP UTC (UTC+01:00) Belgrade, Bratislava, Budapest, Ljubljana, Prague

Synchronize with NTP

NTP Server clockisc.org

NTP Port 123 (0-65535)

Update Period 10 Minutes(0-65535) Save

Auto Reboot

Auto Reboot Sunday 00:00 OK

Manual Reboot

You have selected 1 device(s)